

Connecting Flash Bracket Modules:



Attaching Your Flash Unit:

Wimberley Flash brackets have a 1/4"-20 mounting thumbscrew that attaches to an off-camera hot shoe cable or a cold shoe adapter such as the Wimberley AP-7. We do not sell flash cords. Please follow camera and flash unit recommendations when purchasing flash cords to ensure proper signal transmission.



The Nikon SC-29 cord requires the use our **FA-11** Flash Cord Adapter (Sold separately) to attach the cord snugly to the bracket because the cord mounting foot is slightly too wide to fit properly in the slot on the flash arm. Some older Canon off-camera flash cords have this same issue.



Positioning your Flash:

The Modular Flash Bracket System design allows you to easily disassemble brackets for convenient storage. It also allows you to adjust the size of the bracket to fit different sized lenses using the keyed slots of the upright module to increase or decrease the height of the flash unit. Flip the Tilt Arm upside down to lower the flash even further. When the F-3 is used flipped upside down, the thumbscrew must also be flipped. Below are some of the possible configurations.



Thank you for your interest in Wimberley products. If you have any questions or comments please feel free to contact us.