
About the AP-7 _

The **AP-7** is a universal Flash Adapter which securely holds most flashes, shoe cords or shoe adapters attached to other devices.

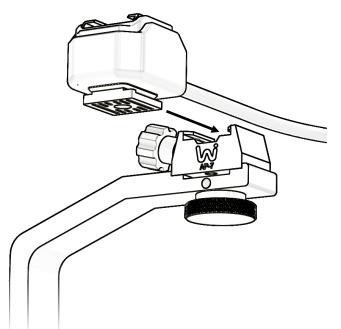

Slide the off-camera shoe cord or remote trigger equipped flash into the Flash Adapter until it stops and tighten the knob.

