Re-attaching the clip

To re-attach the clip, forcefully press it onto the segment that is was previously attached to. It should snap into place

with an audible "pop". It takes a substantial amount of pressure to make this happen.

Wimberley

KY-PP-201

Near-boiling Submerge Water female end 30-60 sec.



can heat up the female socket to facilitate the process

If you are having difficulty you

Includes: T20 Hex Key

Dimensions: Torx 20 x 0.9" L (Short arm) x 2.7" L (Long arm) Plamp Thumbscrew Clip Tension Adjust Key Website: Tripodhead.com Phone: 434-529-8385

 
Adjusting the rotational resistance of the clip ___

The Plamp clip is designed to rotate relative to the articulating arm with slightly less resistance than is found between similar arm segments.

If you desire this resistance to be higher or lower, you may accomplish this by adjusting the Torx 20 mounting screw clockwise (for more resistance) or counter-clockwise (for less resistance)



You may access this screw by popping off the final arm segment and plamp clip from the arm.



The screw may